#### USER MANUAL AND SPECIFICATIONS

# MT1103

#### **Digitizer Adapter Module**

The MT1103 is a 250 MS/s analog input adapter module designed to work in conjunction with your NI FlexRIO<sup>™</sup> FPGA module. The MT1103 features the following connectors and chips:

- 8 simultaneously sampled channel, 250 MS/s analog-to-digital converter (ADC) with 14bit accuracy
- Timing chip with clocking options from the backplane and the front panel
- 120 MHz bandwidth and unfiltered versions for under sampling signals up to 500 MHz
- The following front panel connectors:
  - CLK IN
  - AI 0
  - AI 1
  - AI 2
  - AI 3
  - AI 4
  - AI 5
  - AI 6
  - AI 7
  - DIO

This document contains signal information and lists the specifications of the MT1103, which is composed of the NI Flex RIO FPGA module and the MT1103. This document also contains tutorial sections that demonstrate how to acquire data using a LabVIEW FPGA Example VI and how to create and run your own LabVIEW project with the MT1103.



**Note** MT1103 refers to the combination of your MT1103 adapter module and your NI FlexRIO FPGA module. MT1103 refers to your MT1103 adapter module only.



**Note** The MT1103 is only compatible with the NI PXIe-796xR FPGA modules.



**Note** Before configuring your MT1103, you must install the appropriate software and hardware. Refer to the *NI FlexRIO FPGA Module Installation Guide and Specifications* for installation instructions.




**Note** For EMC compliance, operate this device according to the documentation



The following figure shows an example of a properly connected NI FlexRIO device.

Figure 1. NI FlexRIO Device

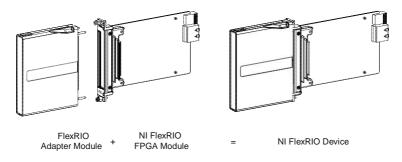

#### **Related Information**

MT1103 Specifications on page 15

# **Contents**

# **Electromagnetic Compatibility Guidelines**

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) stated in the product specifications. These requirements and limits are designed to provide reasonable protection against harmful interference when the product is operated in the intended operational electromagnetic environment.

This product is intended for use in industrial locations. However, harmful interference may occur in some installations, when the product is connected to a peripheral device or test object, or if the product is used in residential or commercial areas. To minimize interference with radio and television reception and prevent unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Furthermore, any modifications to the product not expressly approved by National Instruments could void your authority to operate it under your local regulatory rules.



**Caution** To ensure the specified EMC performance, operate this product only with shielded cables and accessories.



**Caution** To ensure the specified EMC performance, the length of all I/O cables must be no longer than 3 m (10 ft).



**Caution** To ensure the specified EMC performance, you must install PXI EMC Filler Panels (National Instruments part number 778700-1) in adjacent chassis slots.

# **Connecting Cables**

1. Use any shielded  $50\Omega$  SMB cable to connect signals to the connectors on the front panel of your device.

#### **Related Information**

MT1103 Specifications on page 15

# **Key Features**

The MT1103 includes the following key features:

Input frequency range	. DC to 120MHz	(DC coupled Option-01)
	400 kHz to 120 MHz	(AC coupled Option-02)
Instantaneous bandwidth(-3dB)	120 MHz (Filtered),	550 MHz (Unfiltered)
ADC	14-bit channel at 250	MS/s

# Configuration

You can configure the MT1103 as follows:

- Instantaneous bandwidth up to 120 MHz
- 8 receiver channel, 14-bit, 250 MS/s

# Front Panel and Connector Pinouts

Table 1shows the front panel connector and signal descriptions for the MT1103.



**Caution** To avoid permanent damage to the MT1103, disconnect all signals connected to the MT1103 before powering down the module, and connect signals

Only after the adapter module has been powered on by the NI FlexRIO FPGA module



**Caution** Connections that exceed any of the maximum ratings of any connector on the MT1103 can damage the device and the chassis. NI is not liable for any damage resulting from such connections

#### **Related Information**

MT1103 Specifications on page 15

Device Front Panel	Connector	Signal Description
Mich Pechnologica	CLK IN	Reference Clock input, 50Ω single-ended (SE), +20 dBm maximum
MT1103	AI 0	Analog Input Channel 0, analog input SE channel
(i) Alo	AI 1	Analog Input Channel 1, analog input SE channel
(a) Al 1	AI 2	Analog Input Channel 2, analog input SE channel
(a) Al 3	AI 3	Analog Input Channel 3, analog input SE channel
(i) Al 5	AI 4	Analog Input Channel 4, analog input SE channel
(a) A17	AI 5	Analog Input Channel 5, analog input SE channel
DIO	AI 6	Analog Input Channel 6, analog input SE channel
4	AI 7	Analog Input Channel 7, analog input SE channel
	DIO	Refer to Table 3 for the signal list and descriptions.

#### **DIO Connector**

Table 2. MT1103 DIO Connector Pin Assignments


DIO Connector	Pin	Signal	Signal Description
	1	Port 0 (DIO 0)	Bidirectional single-ended (SE) digital I/O (DIO) data channel.
	2	GND	Ground reference for signals.
	3	Port 0 (DIO 1)	Bidirectional SE DIO data channel.
	4	Port 0 (DIO 2)	Bidirectional SE DIO data channel.
	5	GND	Ground reference for signals.
18 - 19	6	Port 0 (DIO 3)	Bidirectional SE DIO data channel.
18 7 7 15	7	Port 1 (DIO 0)	Bidirectional SE DIO data channel.
14 7 713	8	GND	Ground reference for signals.
10 7 7 11	9	Port 1 (DIO 1)	Bidirectional SE DIO data channel.
	10	Port 1 (DIO 2)	Bidirectional SE DIO data channel.
	11	GND	Ground reference for signals.
	12	Port 1 (DIO 3)	Bidirectional SE DIO data channel.
	13	Port 2 (DIO 0)	Bidirectional SE DIO data channel.
	14	+3.3 V	+3.3 V power (50 mA maximum).
	15	Port 2 (DIO 1)	Bidirectional SE DIO data channel.
	16	Port 2 (DIO 2)	Bidirectional SE DIO data channel.
	17	GND	Ground reference for signals.
	18	+3.3 V	+3.3 V power (50 mA maximum).
	19	Port 2 (DIO 3)	Bidirectional SE DIO data channel.




**Caution** The DIO connector accepts a standard, third-party HDMI cable, but the DIO port is not an HDMI interface. Do not connect the DIO port on the MT1103 to the HDMI port of another device. MT is not liable for any damage resulting from such signal connections.

The following figure shows the MT110 3block diagram.

Figure 3. MT1103 Block Diagram

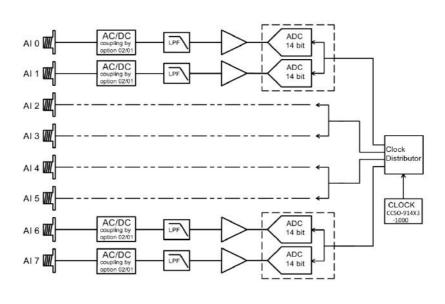

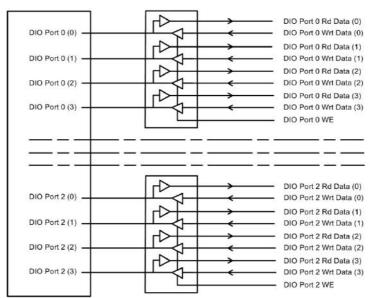

# MT1103 Component-Level Intellectual Property (CLIP)

The LabVIEW FPGA Module includes component-level intellectual property (CLIP) for HDL IP integration.NI FlexRIO devices support two types of CLIP: user-defined and socketed.

- *User-defined CLIP* allows you to insert HDL IP into an FPGA target, enabling VHDL code to communicate directly with an FPGA VI.
- Socketed CLIP provides the same IP integration of the user-defined CLIP, but also allows
  the CLIP to communicate directly with circuitry external to the FPGA. Adapter module
  socketed CLIP allows your IP to communicate directly with both the FPGA VI and the
  external adapter module connector interface.

The following figure shows the relationship between an FPGA VI and the CLIP.

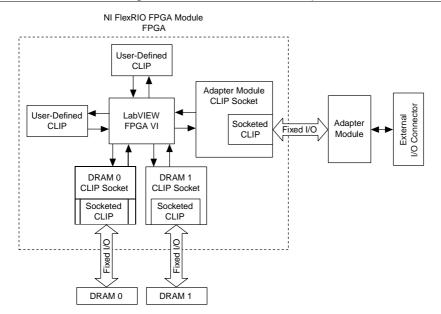


Figure 4. CLIP and FPGA VI Relationship

The MT1103 ships with socketed CLIP items that add module I/O to the LabVIEW project.

#### MT1103 CLIP

The MT1103 CLIP provides access to four receive channels and DIO data channels. The CLIP also provides a User Command interface for common configurations of the baseband clocking.

Configure the baseband clocking using one of the following settings:

- Internal Sample Clock
- Internal Sample Clock locked to an external Reference Clock though the CLK IN connector
- External Sample Clock through the CLK IN connector
- Internal Sample Clock locked to an external Reference Clock through the Sync Clock

This CLIP also contains a SPI interface, which directly programs registers on all programmable devices, such as the analog-to-digital converter (ADC) and the clock distributor. Programming registers on these devices allows for more advanced configuration.

## Programmable Chips

You can program the following chips from the CLIP.

Table 3. Programmable Chips

Chip	
ADC	
Clock Distributor	

# Using Your MT1103 with a LabVIEW FPGA Example VI



**Note** You must install the software before running this example. Refer to the *NI FlexRIO FPGA Installation Guide and Specifications* for more information about installing your software.

The MT FlexRIO Adapter Module Support software includes an example project to help you get started creating your LabVIEW FPGA application. This section explains how to use an existing LabVIEW FPGA example project to generate and acquire samples with the MT1103. This example requires at least one SMA cable for connecting signals to your MT1103.



**Note** The examples available for your device are dependent on the version of the software and driver you are using. For more information about which software versions are compatible with your device, visit ni.com/info, enter rd software version in the text field, and click the NI FlexRIO link in the results.

The MT1103 example project includes the following components:

- A LabVIEW FPGA VI that can be compiled and run on the FPGA embedded in the hardware
- At least one VI that runs on Windows and interacts with the LabVIEW FPGA VI



**Note** In the LabVIEW FPGA Module software, NI FlexRIO adapter modules are referred to as *IO Modules*.

## Using the Included Streaming Example

Complete the following steps to run an example that acquires a waveform using the MT1103.

- 1. Connect an antenna to the AI 0 connector on the front panel of the MT1103.
- 2. Launch LabVIEW.
- 3. Select File» Open Project.
- 4. Navigateto<labview>\examples\instr\MT1103\Getting Started.
- 5. Select MT1103 Getting Started.lvproj.
- 6. In the Project Explorer window, select MT1103 Getting Started (Host).vi under My Computer to open the host VI. The Open FPGA VI Reference function in this VI uses the NI 7965R as the FPGA target by default. If you are using an NI FlexRIO FPGA module other than the NI 7965R, complete the following steps to change to the FPGA VI to support your target.
  - a) On the block diagram, right-click the Open FPGA VI Reference (PXI-7965R) function and select **Configure Open FPGA VI Reference**.
  - b) In the Configure Open FPGA VI Reference dialog box, click the Browse button next to the Bitfile button.
  - c) In the **Select Bitfile** dialog box that opens, select the bitfile for your desired target. The bitfile name is based on the adapter module, example type, and FPGA module.
  - d) Click the **Select** button.
  - e) Click **OK** in the **Configure Open FPGA VI Reference** dialog box.
  - f) Save the VI.
- 7. On the front panel, in the **RIO Device** pull-down menu, select an MT1103 resource that corresponds with the target configured in step 6.
- 8. Click the **Run** button to run the VI.
- 9. The VI acquires data and displays the captured waveform on the **Timing Diagram** and **Power Spectrum** graphs.
- 10. Click the **STOP** button to stop the VI.
- 11. Close the VI.

## Creating a LabVIEW Project

This section explains how to set up your target and create an FPGA VI and host VI for data communication. This section focuses on proper project configuration, proper CLIP configuration, and how to access MT1103 I/O nodes.

#### Creating a Project

- 1. Launch LabVIEW, or if LabVIEW is already running, select File»Create Project.
- 2. In the Create Project dialog box, select LabVIEW FPGA Project and click Finish.
- 3. Select FlexRIO on My Computer and click Next.
- 4. Either discover a LabVIEW FPGA target in your system or create a new system and specify an FPGA target for which to construct a project.
- 5. Click **Finish** in the **Project Preview** dialog box.
- 6. Click **File**»Save and specify a name for the project.

### Creating an FPGA Target VI

- 1. In the **Project Explorer** window, expand **FPGA Target**.
- 2. Right-click **IO Module** in the **Project Explorer** window and select **Properties**.
- 3. Select Enable IO Module.
- 4. Select the MT1103 from the **IO Module** list. The available CLIP for the MT1103 is displayed in the **Component Level IP** pane.
- 5. Select MT1103 in the **Name** list of the **Component Level IP** pane.
- 6. Right-click FPGA Target and select New» FPGA Base Clock.
- 7. In the **Resource** pull-down menu, select **IO Module Clock 0** and click **OK**.
- 8. Right-click FPGA Target and select New» FPGA Base Clock.
- 9. In the **Resource** pull-down menu, select **IO Module Clock 1** and click **OK**.



**Note** Configuring these clocks is required for proper CLIP operation. Refer to the MT1103 CLIP topics in the *NI FlexRIO Help* for more information about configuring your clocks.

- Select File» Open and select<labview>\examples\instr\MT1103\Getting Started\MT1103FPGA.vi.
- 11. Select File» Save As.
- Select Copy» Open Additional Copy and check Add Copy to <your project name>.lvproj.
- 13. Select the destination folder for the new file, specify a file name, and click **OK**. Use this FPGA VI with the MT1103 Configuration Design Library.
- 14. Add any FPGA code, controls, and indicators that you need. Refer to MT1103 Getting Started.lvproj for example FPGA code, controls, and indicators.
- 15. Click the Run button. LabVIEW creates a default build specification and begins compiling the VI. The Generating Intermediate Files window displays the code generation process. The Compilation Status window displays the progress of the compilation. The compilation takes several minutes.
- 16. Click Close in the Compilation Status window.
- 17. Save and close the VI.
- 18. Save the project.

#### Creating a Host VI

- In the Project Explorer window, right-click My Computer and select New»VI to open a blank VI.
- 2. Select **Window**»**Show Block Diagram** to open the VI block diagram.
- Add the Open FPGA VI Reference function from the FPGA Interface palette to the block diagram.
- 4. Right-click the Open FPGA VI Reference function and select Configure Open FPGA VI Reference.
- 5. In the Configure Open FPGA VI Reference dialog box, select VI in the Open section.
- 6. In the **Select VI** dialog box, select your project under your device and click **OK**.
- 7. Click **OK** in the **Configure Open FPGA VI Reference** dialog box. The target name appears under the Open FPGA VI Reference function in the block diagram.
- 8. Select File» Open and select <labview>\instr.lib\MT1103\
- 9. Add any VIs from this folder that you need.
- 10. Open the FPGA Interface palette.
- Add any Read/Write Control or Invoke Method nodes necessary to configure and communicate with your FPGA VI.
- 12. Add the Close FPGA VI Reference function to your block diagram.
- 13. Wire the FPGA VI Reference function to the Close FPGA VI Reference function.
- 14. Save and close the VI.
- 15. Save the project.

#### Run the Host VI

- 1. Open the front panel of your host VI.
- 2. Click the **Run** button to run the VI.

# MT1103 Configuration Design Library

The MT1103 Configuration Design Library consists of host and FPGA VIs that provide an interface to configure the hardware on the MT1103.

The library allows you to perform the following actions:

- Configure the RF signal path
- Read from and write to the EEPROM
- Configure the clocks
- Reinitialize the CLIP
- Query for CLIP errors

The MT1103 Configuration Design Library relies on the Register Bus Design Library. The Register Bus provides a packet-based configuration interface which exposes all of the address spaces of the configurable chips and subsystems of the adapter module, without requiring

hundreds of controls and indicators on your FPGA VI front panel.

The MT1103 Configuration Design Library host VIs all require a register bus object for the device you want to configure. Create the register bus object using Open Session.vi, or use MT1103 Open.vi.

## FPGA VI Requirements

Copy all the controls, indicators, and FPGA logic required to use the MT1103 Configuration Design Library from the following VI:<labview>\instr.lib\MT1103\MT1103 Open.vi. The FAM Support installer installs this VI on your system.

Configure your FPGA target to contain a FIFOs with the following configuration.

- Names: ADC CH0 FIFO /ADC CH1 FIFO/ADC CH2 FIFO-/-ADC CH7 FIFO
- Type: Target to Host DMA
- Requested number of elements: 32768
- Data type: U16
- Arbitration for read: Arbitrate if multiple requestors only
- Number of elements per write: 1

## Host VI Requirements

Configure your host VI to use the MT1103 Configuration Design Library using the following configuration:

- Create a Register Bus object for your device and initialize the session using MT1103 Open.vi.
- 2. Use any of the MT1103 Configuration Design Library Host VIs using the Register Bus object returned by the MT1103 Open VI.
- 3. To access the Host VIs, select Functions»Instrument I/O» Instrument Drivers» MT1103.
- Close the session using the MT1103 Close VI.

# Clocking

The MT1103 clock source controls the sample rate and other timing functions on the device. The following table contains information about the possible MT1103 clock sources.

Table 4. MT1103 Clock Sources

Clock	Frequency	Source Options
Sample Clock	250 MHz	Free-running and internally sourced
Reference Clock	250 MHz	External through the CLK IN front panel connector

Type of Clock Oscillator - CCSO-914X3-1000 (1 GHz):

Phase Noise Typical: 1kHz -112 dBc/Hz
10kHz -142 dBc/Hz
100kHz -155 dBc/Hz
1MHz -167 dBc/Hz
10MHz -168 dBc/Hz

# MT1103 Specifications

Specifications are warranted by design and under the following conditions unless otherwise noted:

- Chassis fan speed is set to High. In addition, NI recommends using slot blockers and EMC filler panels in empty module slots to minimize temperature drift.
- The MT1103 uses NI LabVIEW and LabVIEW FPGA software.

Specifications describe the warranted product performance over ambient temperature ranges of 0  $^{\circ}$ C to 55  $^{\circ}$ C, unless otherwise noted.

*Typical* values describe useful product performance beyond specifications that are not covered by warranty and do not include guard bands for measurement uncertainty or drift. Typical values may not be verified on all units shipped from the factory. Unless otherwise noted, typical values cover the expected performance of units over ambient temperature ranges of  $23~^{\circ}\text{C} \pm 5~^{\circ}\text{C}$  with a 90% confidence level, based on measurements taken during development or production.

*Nominal* values (or supplemental information) describe additional information about the product that may be useful, including expected performance that is not covered under *Specifications* or *Typical* values. Nominal values are not covered by warranty.

#### Related Information

Front Panel and Connector Pinouts on page 3
Connecting Cables on page 4
MT1103 User Manual and Specifications on page 1

#### Al 0÷7 Front Panel Connectors

#### Amplitude Range

AI input range ......2V (pp)

## **Typical Characteristics**



Note All values are typical.

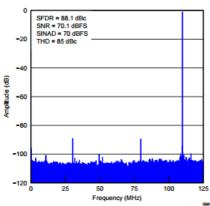


Figure 9. FFT For 140MHz Input Signal

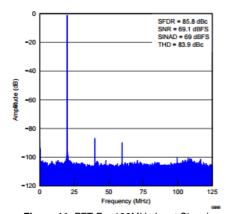


Figure 11. FFT For 190MHz Input Signal

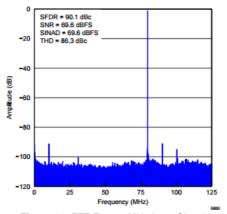


Figure 10. FFT For 170MHz Input Signal

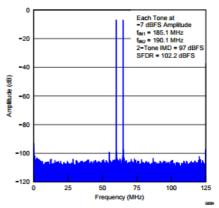


Figure 12. FFT For Two-Tone Input Signal

#### **CLK IN Front Panel Connector**

Eroo	110001
rieu	uency

Reference Clock,	5÷250 MHz
Sample Clock	5÷250 MHz

#### Amplitude

Square	$0.7V_{pk-pk}$ to $5.0V_{pk-pk}$ into $50 \Omega$ , typical
	$1.1.4V_{pk-pk}$ to $5.0V_{pk-pk}$ ( $1V_{RMS}$ to $3.5V_{RMS}$ )
	into 50 Ω, typical

Coupling.....AC

## **Baseband Characteristics**

#### **ADC**

Resolution	14 bits
Data rate	250 MS/s
Samples per cycle	1

## Dimensions and Weight

Dimensions	12.9 $\times$ 2.0 $\times$ 12.1 cm (5.1 $\times$ 0.8 $\times$ 4.7 in)
Weight	413 g (14.6 oz)
I/O	AI 0, AI 1, AI 2, AI 3,AI 4, AI 5, AI 6, AI 7, CLK IN
Power	3 W, nominal

# DIO (DIO <0...11>, and +3.3 V power)

#### **General Characteristics**

Number of channels	12 bidirectional (12 DIO and 2 Pw)
Connector type	HDMI
Interface standard	3.3 LVCMOS
Interface logic	
Maximum V <sub>IL</sub>	0.8V
Minimum .V. <sub>H</sub>	2.0V

Maximum V <sub>OL</sub>	0.4V
Minimum V <sub>OH</sub>	2.7V
Maximum.V <sub>OH</sub>	3.6V
Z <sub>OUT</sub>	50Ω±20%
I <sub>OUT</sub> (DC)	±2mA
Pull-down resistor	150 kΩ
Recommended operating voltage	0.3V to 3.6 V
Overvoltage protection	±5V
Maximum toggle frequency	6.6 MHz
+3.3 V maximum power	100 mA
+3.3 V voltage tolerance	3.1 V to 3.4 V

#### **Environment**

Maximum altitude	2,000 m (at 25 °C ambient temperature)
Pollution Degree	2
Indoor use only.	

## Operating Environment

Ambient temperature range	0 °C to 55 °C
Relative humidity range,	10% to 90%,


#### Storage Environment

Ambient temperature range	40 °C to 70 °C
Relative humidity range	5% to 95%,
Operational shock.	30 g peak, half-sine, 11 ms pulse

# Installing PXI EMC Filler Panels

To ensure specified EMC performance, PXI EMC filler panels must be properly installed in your NI FlexRIO system. The PXI EMC filler panels (National Instruments part number 778700-01) must be purchased separately. For more installation information, refer to the NI FlexRIO FPGA Module Installation Guide and Specifications.

- 1. Remove the captive screw covers.
- Install the PXI EMC filler panels by securing the captive mounting screws to the chassis, as shown in the figure below. Make sure that the EMC gasket is on the right side of the PXI EMC filler panel.

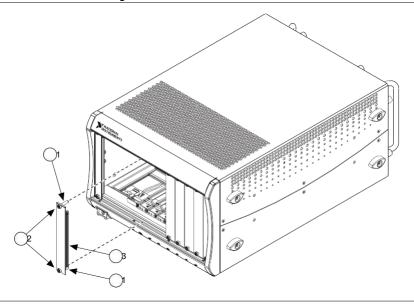

- 1. Captive Screw Covers
- 2. Captive Mounting Screws
- 3. EMC Gasket



**Note** You must populate all slots with a module or a PXI EMC filler panel to ensure proper module cooling. Do not over tighten screws (2.5 lb · in maximum). For additional information about the use of PXI EMC filler panels in your PXI system, visit ni.com/info and enter emc panels.

#### **Related Information**

Electromagnetic Compatibility Guidelines on page 3

# Where to Go for Support

The Mush Technologies Web site is your complete resource for technical support. At <a href="https://www.mush-tech.com/you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from MT Application Engineers.">https://www.mush-tech.com/you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from MT Application Engineers.</a>

Mush Technologies corporate headquarters is located at 123 Hovsep Emin Street, EIF entrance, Yerevan, 0051, Armenia, Phone: +37410 21 97 26.